 


NORITZ Waterproof MP3 player JUKE TOWER


Abridged Manual

General parts

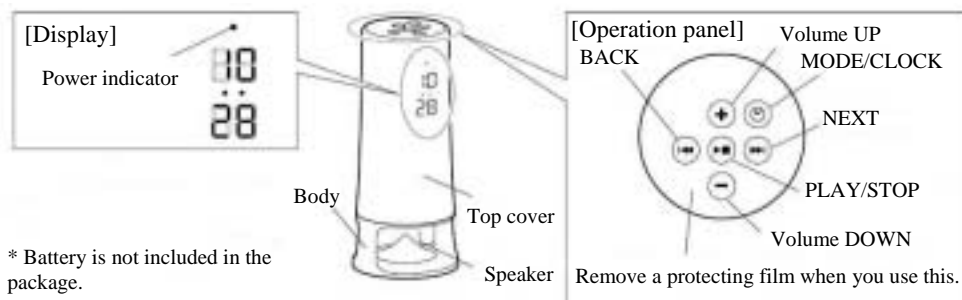


Setting batteries and a USB memory stick


1. Turn the Top cover to the direction shown by an arrow to Position (A) and lift it up.

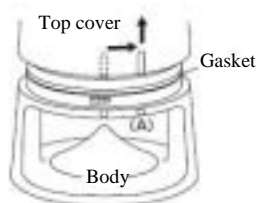

2. Remove the battery cover and set three batteries to the right position. Reset the battery cover again. Then insert a USB memory stick to the USB terminal.

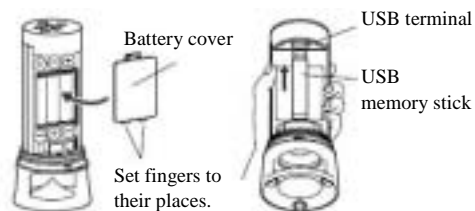

3. Set the Top cover to the mark at Position (A) and turn it to Position (B).

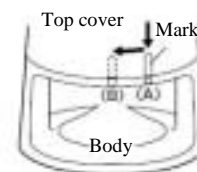

* Hold the body firmly and insert a USB memory stick.

Replacement of batteries: When batteries get weak, the power indicator flashes. (Weak battery indicator).

When batteries get weak, sound volume gets lower, display gets darker and noises occur. In these cases, replace all three batteries.

Operations

[Basic Operations]

1. Playing

Press PLAY/STOP button

Turning the player on, the player beeps and starts playing after memory search.

Searching	01	Folder number
	01	Song number

- Folder number and song number are displayed for about five seconds. After five seconds, information selected by display switching mode is displayed.
- Depending on the number of files and the structure of folders, searching may take some time.
- To avoid leaving the player on for a long time, if it is left untouched for about one hour after the last operation, it will be turned off. (Automatic turning off function)
- Because of the type of USB memory stick, LED light may be shown through the player's body.

2. Adjusting volume

Press Volume Up/Down button whilst playing.

Volume level can be controlled in 32 stages (0-31).

15 Volume level is displayed.
eg. 15

- Volume level is displayed for about five seconds.

3. Stop Operation (Power Off)

Press PLAY/STOP button whilst playing.

The player beeps and stops playing, turning power off.

All information cleared from the display.

- For the next operation, the song played in the last operation is played from its beginning. (Resume function)
- The player cannot be operated for about 30 seconds after stop operation.

[Other operations]

Playing the next song

Press NEXT button whilst playing.

The player starts playing the next song.

- The number of the song and the folder are displayed for about five seconds.

Restarting the present song

Press BACK button whilst playing. The present song is played from its beginning.

- If BACK button is pressed within three seconds of beginning of a song, the previous song is played.
- The number of the song and the folder are displayed for about five seconds.

Skipping a folder

Press and hold NEXT/BACK button for a while (about one second or more).

The player beeps and skips one folder per one second.

- Operations cannot be accelerated.
- Depending on the number of files and the structure of folders, skipping may take more than one second.

Clearing resuming memory

Press and hold PLAY/STOP button for a while (more than two seconds).

The player beeps shortly twice and starts playing from the first song.

- When a new USB memory stick is set, the player may not play from the first song. If this is the case, clear resuming memory.

Selecting a display mode

Press MODE/CLOCK button.

Display mode changes following the cycle below.

The number of the song and the folder

Clock

Nothing displayed

[Repeating the cycle]

- When the power is turned off, Clock mode and Nothing mode changes in turn. In 30 minutes, clock mode stops automatically.
- If time is not set, it is not displayed.

[Clock setting]

1. Press and hold MODE/CLOCK button for a while (more than two seconds).

The player beeps and clock setting mode is displayed. When time is not set, short bars flash. When time is set, set time flashes.

2. Set time by Volume UP/DOWN buttons

Time can be advanced by Volume UP button.

Time can be regressed by Volume DOWN button.

- You can accelerate the process by holding buttons.

3. Press MODE/CLOCK button to complete setting

Even if clock setting mode is left without completing, setting becomes valid after 20 seconds of the last operation.

[Adjusting display lighting]

1. Press and hold MODE/CLOCK button for a while (more than two seconds)

The player beeps and clock setting mode is displayed.

2. Adjust display lighting by NEXT/BACK buttons

Brightness can be selected from four stages. The initial setting is the second brightest.

3. Press MODE/CLOCK button to complete setting

Even if clock setting mode is left without completing, setting becomes valid after 20 seconds of the last operation.

You can set clock and display lighting during playing songs. However, Volume UP/DOWN and NEXT/BACK buttons are available only for one mode at a time.

Caution

- Do not replace batteries and insert a USB memory stick with wet hands.
- Turn off the power when you replace batteries and insert a USB memory stick.
- Replace batteries and insert a USB memory stick in a dry area.
- Use only alkaline batteries.