




Change the way you think about time

SPACE
DIGITS

INSTRUCTION MANUAL

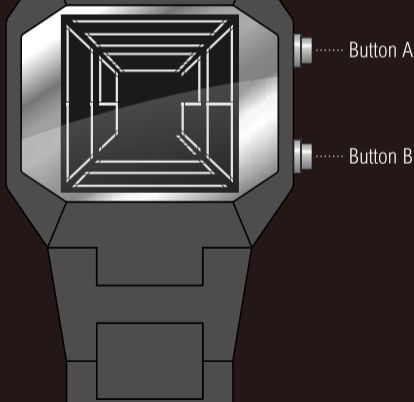

1. How to read the time and date

- This watch uses an “always on” LCD display to show the time.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The display shows both time and date. Hours are shown on the left side of the display, minutes are shown on the right. The month is shown in the upper half of the display, the day in the lower half of the display.

Example



04:59 March 28th

Examples



09:37 June 15th



08:26 December 4th

2. How to check the alarm time


- Press button B to display the alarm time.
- The 'alarm on' icon indicates that you are in alarm mode.
- The PM icon will be lit when the alarm time is set to PM.

Examples

alarm mode icon alarm on icon



08:30 AM alarm on

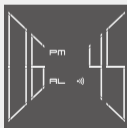

06:45 PM alarm on

3. How to set the alarm

- When the alarm time is displayed, press and hold button A for 3 seconds to enter alarm setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

- The alarm mode icon indicates that you are in alarm setting mode.
- Press button B to turn the alarm ON or OFF.
- The alarm on icon indicates that the alarm is on.
- Press button A to confirm and move to the alarm hour.
- Press button B to increase the alarm hour as required.
- Press button A to confirm and move to the alarm minutes.
- Press button B to increase the alarm minutes as required.
- Press button A to confirm and exit alarm setting mode.

Example

alarm mode icon alarm on icon



07:00 AM alarm on

4. How to set the date and time

- When the time is displayed, press and hold button A for 3 seconds to enter setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

I. Setting the year

- The year digits will flash when you are in year setting mode.
- Press button B to increase the year as required.
- Press button A to confirm and move to the month.

Example



II. Setting the month

- The month digits will flash when you are in month setting mode.
- Press button B to increase the month as required.
- Press button A to confirm and move to the date.

III. Setting the date

- The date digits will flash when you are in date setting mode.
- Press button B to increase the date as required.
- Press button A to confirm and move to the hour

IV. Setting the hour

- The hour digits will flash when you are in hour setting mode.
- The PM icon in setting mode indicates that you are setting the time in PM.
- The PM icon only appears in time setting mode.
- Press button B to increase the hour as required.
- Press button A to confirm and move to the minutes.

V. Setting the minutes

- The minute digits will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Press button A to confirm and move to the animation.

VI. Setting the animation

- The display will either animate or be static when you are in animation setting mode.
- When the animation is off, the display will be static. When the animation is on, the display will animate.
- Press button B to turn the animation on or off.
- The animation will appear on 00, 15, 30 and 45 minutes past each hour.
- Press button A to confirm and exit setting mode.

5. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the EL backlight.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch has limited resistance to water. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Wood
Strap Materials	Wood
Case Dimensions	38 x 47 x 14 mm
Finish	Clear coating
Maximum Fit Wrist Size	210mm (approx.)
Weight	55g
Display	LCD with EL backlight
Battery	CR2025

