

SEQUENCE

SEQUENCE

INSTRUCTION MANUAL



1. How to read the time

Sequence has 2 difficulty settings for telling the time [Regular] & [Cryptic]
You may also choose to display the time in [12hr] or [24hr] modes.
The default setting is [Cryptic] [12hr].
See section 3 "How to set the time" to change your preference.

- Press button A once to display the time.

Note: The time will be displayed for 7 seconds.

I. Regular difficulty mode

09:34 PM



(12hr time mode)

20:56




(24hr time mode)

Digits 0-9 in
regular difficulty.



II. Cryptic difficulty mode

 12:36 AM



(12hr time mode)

23:45



(24hr time mode)

Digits 0-9 in cryptic difficulty.



Hint: It's almost the same as regular, but the middle line is missing. (exception, number 8)

2. How to check the date & alarm

- Press button A repeatedly to change between Time, Date & Alarm.



Note: The time, date or alarm will be displayed for 7 seconds.

I. Reading the date

- Press button A twice to go directly to date mode.
The Date icon will be displayed.



April 18th = 04 18
(Regular mode)

Date icon



December 24th = 12 24
(Cryptic mode)


Note: The date is displayed as MONTH (1-12) followed by DAY (1-31).

II. Reading the alarm

- Press button A three times to go directly to alarm mode. The Alarm icon will be displayed.

08:30 PM
(Regular mode)

06:45
(Cryptic mode)

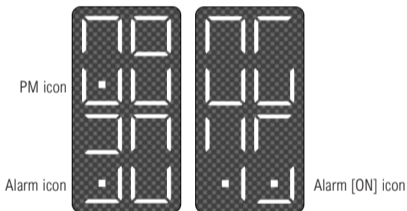

3. How to set the time and animation

- While the time is displayed, press & hold button B.
- The hour digits will begin flashing & the SET icon will be lit.
- You will be asked to set the following options in sequence.

Hours

Mins

12hr/24hr

Difficulty

Animation

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Setting the hour

Hours flashing

SET icon

PM icon

- The hour digits will be flashing.
- Press button A to increase the hour.
- Press button B to accept.



- The minute digits will be flashing.
- Press button A to increase the minutes.
(hold A to increase quickly)
- Press button B to accept.

Minutes flashing



III. Setting 12hr / 24hr

- The display will flash the current time mode [12] or [24].
- Press button A to change the mode.
- Press button B to accept.



IV. Setting the difficulty mode

- The display will flash the current time in either [Regular] or [Cryptic] mode.
- Press button A to change between difficulty modes.
- Press button B to accept.

[Regular]

Press



[Cryptic]



V. Setting the animation

Animation mode can be either ON or OFF.

When ON the watch will animate the display every 15 minutes between 6pm and midnight.

There are 6 different animation patterns to choose from.

- The display will show the current animation setting
- Press button A to change the setting.
- Press button B to accept & finish.

[Animation OFF]

Press



Select various patterns



Hint: When setting the watch, you may skip each stage by pressing B. This way you can easily skip through to the part you want to change & then skip to the end.

4. How to set the date

- While the date is displayed, press & hold button B.
- The year digits will begin flashing & the SET & Date icons will be lit.

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Setting the year

- The year will be flashing.
 - Press button A to increase the year.
 - (hold A to increase quickly)
- Press button B to accept.

SET icon

Date icon

Year flashing



II. Setting the month

- The month digits will be flashing.
- Press button A to increase the month. (1-12)
- Press button B to accept.

Month flashing



III. Setting the day

- The day digits will be flashing.
- Press button A to increase the day. (1-31)
(hold A to increase quickly)
- Press button B to accept & finish.

Day flashing



5. How to set the alarm

- While the alarm is displayed, press & hold button B.
- The SET & Alarm icons will be lit.

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Turn the alarm ON/OFF

- Press button A to turn the alarm ON or OFF
- The AL ON icon will be lit to indicate ON.
- Press button B to accept.

SET icon


Alarm icon



Alarm
ON
icon


II. Setting the alarm hour

- The hour digits will be flashing.
- Press button A to increase the hour.
- Press button B to accept.

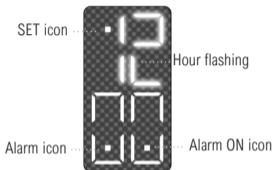

III. Setting the alarm minutes

- The minute digits will be flashing.
- Press button A to increase the minutes.
(hold A to increase quickly)
- Press button B to accept & finish.

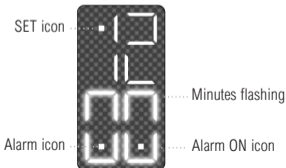

6. Charging the watch

- To recharge the battery, connect the USB charging cable provided to the watch USB port and then to a power source, e.g. your computer.
- To open the watch USB port, use the screw driver included.



USB charging port screw

- When charging, the charging indicator will flash.
- When the charging indicator stops flashing, the watch is 90% charged.

Charging
(lights flashing)



- It is advised that you continue to charge the watch for a full 3.5 hours to ensure the battery is 100% charged.

Included in the box

- Watch
- USB cable
- Screw driver
- Spare USB cap
- Watch manual
- Link USB cable



7. User information

I. Battery

- Sequence uses a PL301517 rechargeable watch battery.
- The battery should last about 2 months between charges.
- The battery lifetime is expected to be 300 charges.
- Only use the cable provided with the watch for recharging, as it is designed specifically for this watch.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch has limited resistance to water. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Wood
Strap Materials	Wood
Case Dimensions	29mm x 52mm x 14mm
Finish	Clear coating
Maximum Fit Wrist Size	210 mm (approx.)
Weight	68g
Display	LED Digital Tube
Battery	PL301517