



Change the way you think about time



INSTRUCTION MANUAL



..... Button A


..... Button B

1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The time is displayed digitally in negative space with hours in the upper half of the screen and minutes in the lower half of the screen.
- Press button B to reveal the time in on a plain background.
 - * Press button B three times to revert back to maze mode.

Example

Maze mode

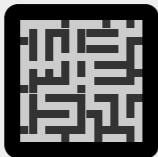

12:57

Number mode




12:57

2. How to read the date

- In maze mode, press button B twice to display the date
- The date icons indicate that you are in date mode.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The date is displayed digitally in negative space with the month in the upper half of the screen and date in the lower half of the screen.
- The display will change back to maze mode after a short time.

Example

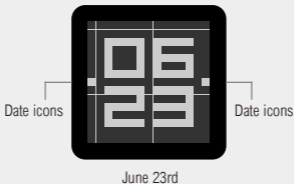


3. How to check the alarm time

- In maze mode, press button B three times to display the alarm time.
- The alarm mode icons (a dot in each corner of the display) indicate that you are in alarm mode.


Example

AM indicator

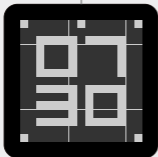

07:30 AM alarm on

10:25 PM alarm on

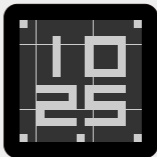

PM indicator



Alarm off

alarm mode icons:
a dot in each corner
of the display.

4. How to set the time

- In maze mode, press and hold button A for 3 seconds to enter setting mode.
*Note after 5 seconds of inactivity setting mode will deactivate

I. Setting the hour

- The hour digits will flash when you are in hour setting mode.
- The AM or PM indicator in setting mode indicates that you are setting the time in AM or PM.
- The AM indicator is a dot at the top in the center of the display. The PM indicator is a dot at the bottom in the center of the display.
- Press button B to increase the hour as required.
- Press button A to confirm and move to the minutes.

II. Setting the minutes

- The minute digits will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Press button A to confirm and move to the animation.

III. Setting the animation

- The display will either flash or animate when you are in animation setting mode.
- Press button B to turn the animation on or off. When the animation is off, the display will flash, when the animation is on, the display will animate.
- Press button A to confirm and exit setting mode.

5. How to set the date

- In date mode, press and hold button A for 3 seconds to enter setting mode.
*Note after 5 seconds of inactivity setting mode will deactivate

I. Setting the year

- The year digits will flash when you are in year setting mode.
- The date icons indicate that you are in date setting mode.
- Press button B to increase the year as required.
- Press button A to confirm and move to the month.

II. Setting the month

- The month digits will flash when you are in month setting mode.
- Press button B to increase the month as required.
- Press button A to confirm and move to the date.

III. Setting the date


- The date digits will flash when you are in date setting mode.
- Press button B to increase the date as required.
- Press button A to confirm and exit setting mode.

6. How to set the alarm

- In alarm mode, press and hold button A for 3 seconds to enter alarm setting mode.
*Note after 10 seconds of inactivity setting mode will deactivate
- The alarm mode icons indicate that you are in alarm setting mode.
- Press button B to turn the alarm ON or OFF.
- Press button A to confirm and move to the alarm hour.
- Press button B to increase the alarm hour as required.
- The AM or PM icon in alarm setting mode indicates that you are setting the alarm time in AM or PM.
- The AM indicator is a dot at the top in the center of the display. The PM indicator is a dot at the bottom in the center of the display.
- Press button A to confirm and move to the alarm minutes.
- Press button B to increase the alarm minutes as required.
- Press button A to confirm and exit alarm setting mode.

Example

AM indicator

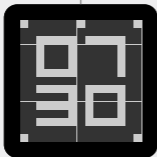

7:30 AM alarm on

alarm mode icons:
a dot in each corner
of the display.

7. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the EL backlight.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Material	Stainless Steel
Strap Material	Stainless Steel
Case Dimensions	36 mm x 36 mm x 10.5 mm
Finish	Brushed
Maximum Fit Wrist Size	210mm (approx.)
Weight	130g
Display	LCD with EL backlight
Battery	CR2025
Water Resistance	3ATM

