



Change the way you think about time

LOGO

INSTRUCTION MANUAL




1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- It has two time modes, regular mode and binary mode.

I. Regular mode

- In regular mode, hours are displayed in squares around the outside of the screen in roughly the same position as hours on a clock. Minutes are displayed digitally in the center.

Hours

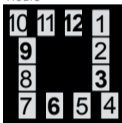

Minutes




Examples of Minute Digits



Example
Regular mode 05:58



Example
Regular mode 12:02

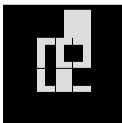

II. Binary mode:

- In binary mode, the time is shown by the black segments. Hours 1, 2, 4 and 8 are displayed at the top of the screen and minutes 1, 2, 4, 8, 16 and 32 are displayed at the bottom of the screen.




Hours

A combination of these numbers represents the current hour and minute. For example, $1+3$ is 4 o'clock. $4+16$ is 20 minutes.

Minutes


Example 1

Binary mode 05:58

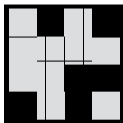


$4 + 1 = 5$ hours

$2 + 8 + 16 + 32 = 58$ minutes

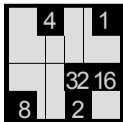


Example 2

Binary mode 12:02

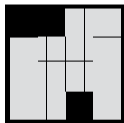

$8 + 4 = 12$ hours

2 minutes

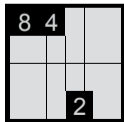


2. Operating the basic functions

I. Turning on the backlight


- You can illuminate the display for a short time with the EL backlight by pressing button A.
- This function only works in a very dark environment.

II. How to read the date

- Press button B to display the date. The date icon indicates that you are in date mode.
- The month is displayed in squares around the outside of the screen, days are displayed digitally in the center.

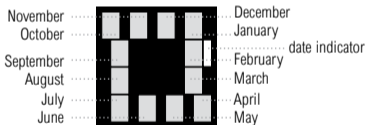


Example: May 23rd

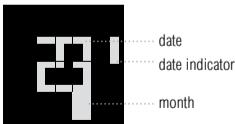

- The display will change back to time mode after a short time.

III. How to check the alarm time

- Press button B twice to display the alarm time.
 - The alarm mode icon indicates that you are in alarm mode.
 - The alarm on icon indicates that the alarm is on.
- The display will change back to time mode after a short time.

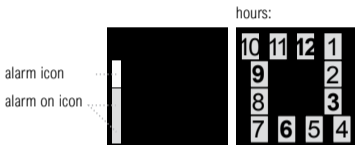


Example

alarm time: 06:20 AM alarm on



Example

alarm time: 08:15 PM alarm off



3. How to set the time and animation


- Press and hold button A for 3 seconds to enter setting mode.

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Setting the hour

- The time icon and hour digits will flash when you are in hour setting mode.
- The AM/PM icon in setting mode indicates that you are setting the time in AM or PM.
- Press button B to increase the hours as required.
- Hold button B to increase the hours more quickly.

Example: 5:17 PM

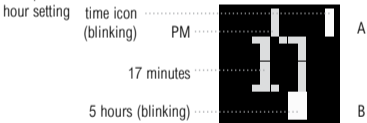

- Press button A to confirm and move to the minutes.

Note: after 7 seconds of inactivity setting mode will deactivate.

II. Setting the minutes

- The time icon and the minute digits will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Hold button B to increase the minutes more quickly.

Example: 5:19 PM
minute setting

PM
19 minutes blinking

5 hours



time icon
(blinking)

- Press button A to confirm and move to the time mode.
Note: after 7 seconds of inactivity setting mode will deactivate.

II. Setting the time mode

- The hour segments and the minute digits will flash when you are in time setting mode.
- Press button B to choose regular mode or binary mode.
- Press button A to confirm and move to animation setting mode.

Note: after 7 seconds of inactivity setting mode will deactivate.

V. Setting the animation

- This watch has an animation feature. When set, the display will animate every 15 minutes between 6pm and midnight.

Example: segments will
animate



- Press button B to turn the animation on or off.
- In setting mode, when the animation is on, the display will animate. When the animation is off, the display will flash.
- Press button A to confirm and exit setting mode.

4. How to set the date


- Press button B to display the date.
- Press and hold button A for 3 seconds to enter date setting mode.

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Setting the month

- The date icon and the month segments will flash when you are in month setting mode.
- Press button B to increase the month as required.
- Hold button B to increase the month more quickly.

Example : August
month setting

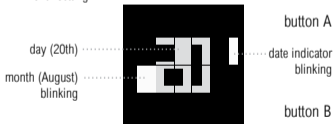


- Press button A to confirm and move to date.

Note: after 7 seconds of inactivity setting mode will deactivate.

III. Setting the date

- The date icon and the date digits will flash when you are in date setting mode.
- Press button B to increase the date as required.
- Hold button B to increase the date more quickly.

Example : August 20th
day setting

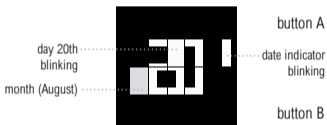

- Press button A to confirm and exit setting mode.
Note: after 7 seconds of inactivity setting mode will deactivate.

5. How to set the alarm time


- Press button **B** twice to display the alarm time.

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Turning the alarm on or off

- Press button **A** to turn the alarm on or off. The alarm icon indicates that the alarm is on.

Example 1: alarm on
alarm on/off setting

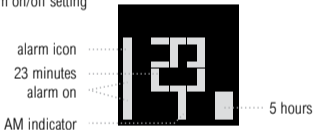

- Hold button **A** for 3 seconds to enter alarm setting mode.


Note: after 7 seconds of inactivity setting mode will deactivate.

II. Setting the alarm hour

- The alarm icon and the hour digits will flash.
- The AM / PM icon in setting mode indicates that you are setting the alarm time in AM or PM.

- Press button B to increase the hour as required.
- Hold button B to increase the hour more quickly.

Example: 05:00 am alarm on

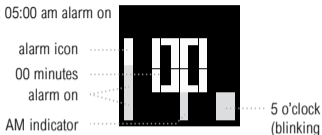


- Press button A to confirm and move to alarm minutes.
Note: after 7 seconds of inactivity setting mode will deactivate.

III. Setting the alarm minutes

- The alarm icon and the minute digits will flash.
- Press button B to increase the minutes as required.
- Hold button B to increase the minutes more quickly.

Example: 07:15 am
alarm on

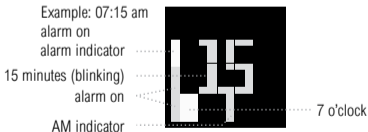

- Press button A to confirm and exit setting mode.
Note: after 7 seconds of inactivity setting mode will deactivate.

8. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the EL backlight.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch has limited resistance to water. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Wood
Strap Materials	Wood
Case Dimensions	39mm x 39mm x 10.5mm
Finish	Clear Coating
Maximum Fit Wrist Size	215mm (approx.)
Weight	45g
Display	LCD with EL backlight
Battery	CR2025

