

UJESU
KISAI

 KISAI®

SEQUENCE

INSTRUCTION MANUAL

USB Port

Button A

Button B



1. How to read the time

Sequence has 2 difficulty settings for telling the time [Regular] & [Cryptic]
You may also choose to display the time in [12hr] or [24hr] modes.
The default setting is [Cryptic] [12hr].
See section 3 "How to set the time" to change your preference.

- Press button A once to display the time.

Note: The time will be displayed for 7 seconds.

I. Regular difficulty mode

09:34 PM




(12hr time mode)

20:56



(24hr time mode)

Digits 0-9 in
regular difficulty.



II. Cryptic difficulty mode

12:36 AM




(12hr time mode)

23:45



(24hr time mode)

Digits 0-9 in cryptic difficulty.

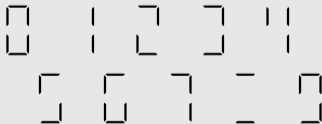

Hint: It's almost the same as regular, but the middle line is missing. (exception, number 8)

2. How to check the date & alarm

- Press button A repeatedly to change between Time, Date & Alarm.



Note: The time, date or alarm will be displayed for 7 seconds.

I. Reading the date

- Press button A twice to go directly to date mode.
The **D** icon will be displayed.



April 18th = 04 18
(Regular mode)

Date icon



December 24th = 12 24
(Cryptic mode)

Note: The date is displayed as MONTH (1-12) followed by DAY (1-31).

II. Reading the alarm

- Press button A three times to go directly to alarm mode.
The **AL** icon will be displayed.

08:30 PM
(Regular mode)



PM icon

Alarm icon

06:45
(Cryptic mode)



Alarm [ON] icon

3. How to set the time and animation

- While the time is displayed, press & hold button B.
- The hour digits will begin flashing & the **SET** icon will be lit.
- You will be asked to set the following options in sequence.

Hours

Mins

12hr/24hr

Difficulty

Animation

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Setting the hour

Hours flashing

SET icon

PM icon

- The hour digits will be flashing.
- Press button A to increase the hour.
- Press button B to accept.



II. Setting the minutes

- The minute digits will be flashing.
- Press button A to increase the minutes.
(hold A to increase quickly)
- Press button B to accept.

Minutes flashing




III. Setting 12hr / 24hr

- The display will flash the current time mode [12] or [24].
- Press button A to change the mode.
- Press button B to accept.



IV. Setting the difficulty mode

- The display will flash the current time in either [Regular] or [Cryptic] mode.
- Press button A to change between difficulty modes.
- Press button B to accept.

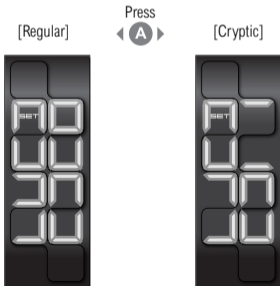

V. Setting the animation

Animation mode can be either ON or OFF.

When ON the watch will animate the display every 15 minutes between 6pm and midnight.

There are 6 different animation patterns to choose from.

- The display will show the current animation setting
- Press button A to change the setting.
- Press button B to accept & finish.

[Animation OFF]

Press



Select various patterns



Hint: When setting the watch, you may skip each stage by pressing B. This way you can easily skip through to the part you want to change & then skip to the end.

4. How to set the date

- While the date is displayed, press & hold button B.
- The year digits will begin flashing & the **SET** & **D** icons will be lit.

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Setting the year

- The year will be flashing.
- Press button A to increase the year.
- (hold A to increase quickly)
- Press button B to accept.

SET icon

Date icon

Year flashing



II. Setting the month

- The month digits will be flashing.
- Press button A to increase the month. (1-12)
- Press button B to accept.

Month flashing



III. Setting the day

- The day digits will be flashing.
- Press button A to increase the day. (1-31)
(hold A to increase quickly)
- Press button B to accept & finish.

Day flashing




5. How to set the alarm

- While the alarm is displayed, press & hold button B.
- The **SET** & **AL** icons will be lit.

Note: after 7 seconds of inactivity setting mode will deactivate.

I. Turn the alarm ON/OFF

- Press button A to turn the alarm ON or OFF
- The  icon will be lit to indicate ON.
- Press button B to accept.

SET icon

Alarm icon



Alarm
ON
icon

II. Setting the alarm hour

- The hour digits will be flashing.
- Press button A to increase the hour.
- Press button B to accept.



III. Setting the alarm minutes

- The minute digits will be flashing.
- Press button A to increase the minutes.
(hold A to increase quickly)
- Press button B to accept & finish.



6. Charging the watch

- To recharge the battery, connect the USB charging cable provided to the watch USB port and then to a power source, e.g. your computer.
- To open the watch USB port, use the screw driver included.



USB charging port screw

- When charging, the charging indicator will flash.
- When the charging indicator stops flashing, the watch is 90% charged.


Charging
(lights flashing)



- It is advised that you continue to charge the watch for a full 3.5 hours to ensure the battery is 100% charged.

Included in the box

- Watch
- USB cable
- Screw driver
- Spare USB cap
- Watch manual

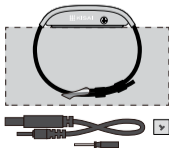

7. User information

I. Battery

- Sequence uses a PL301517 rechargeable watch battery.
- The battery should last about 2 months between charges.
- The battery lifetime is expected to be 300 charges.
- Only use the cable provided with the watch for recharging, as it is designed specifically for this watch.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM.
3ATM means suitable for everyday use to resist splashes of water & rain. 3ATM does not cover swimming, diving or other water related activities.

SPECIFICATIONS

| | |
|---------------------------|----------------------|
| Case Materials | Stainless Steel |
| Strap Materials | Leather |
| Case Dimensions | 25mm x 54mm x 13.5mm |
| Finish | Brushed / Polished |
| Maximum Fit Wrist Size | 210 mm (approx.) |
| Weight | 79g |
| Display | LED Digital Tube |
| Battery | PL301517 |
| Water Resistance | 3ATM |



Change the way you think about time