

blade

 KISAI®

blade

INSTRUCTION MANUAL

USB Port

Button A



A



Button B

B

1. How to read the time

- Blade has 2 time display modes [TURNING] & [FLASHING]
- The default setting is [TURNING]
- To change the time display mode, see section 4 “How to set the time & display modes”.
- Press button A to show the time.

I. Turning Mode

The display will light up an blade which rotates around the face 3 times.

Each time it rotates it leaves 1 line lit, indicating in turn:
[hour] [group of 10 mins] [single mins]

This is known as the 12-5-9 method of time telling.


Examples:

[12] [5] [9] = 12:59

[6] [3] [5] = 6:35

[10] [0] [8] = 10:08

In the image below the line at 3 o'clock is lit, indicating 3

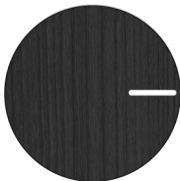

Turning Mode - Full Example

Blade rotates



First Spin

After pressing button A the blade rotates, leaving the 4 o'clock line lit. It is 4 o'clock.

4 o'clock

Blade rotates



Second Spin

On the second rotation the blade leaves the 2 o'clock line lit, indicating 20 minutes. It is 4:20

20 minutes

Blade rotates



Third Spin

On the third rotation the blade leaves the 7 o'clock line lit, indicating 7 minutes. It is 4:27 exactly

7 minutes

Note:


If the blade rotates without leaving any line lit, it indicates ZERO

II. Flashing Mode


The display will light up Hours & Minutes at the same time similar to a regular clock.

One blade will light up to show the hour, one blade will flash to show the minutes. Additional dots may appear to indicate the exact minute.


Time: 6:45

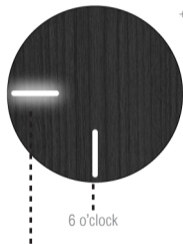

Time: 10:18

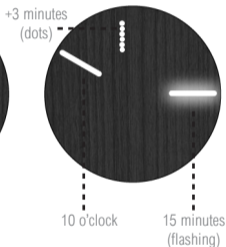

Time: 1:07

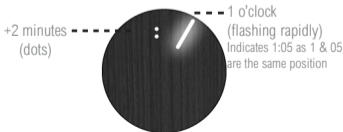

3. How to check the date & alarm

- Press button A to change between [TIME] > [DATE] > [ALARM]
- An icon will show to indicate date or alarm.
- The date or alarm will be displayed in your chosen display mode [TURNING] or [FLASHING]

Date example [Turning Mode]

June 24th

Blade rotates



6 (June)

Date icon

Blade rotates



2

Blade rotates




4

*You may choose to show [Month > Day] or [Day > Month]
See section 5 "How to set the date"

Alarm example [Flashing Mode]

8:33 PM (Alarm ON)

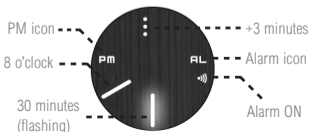

4. How to set the time & display modes

- From the time display, press & HOLD button B to begin setting the time.
- You will be asked to set the following options in sequence.




*Setting mode will exit after 7 seconds of inactivity


I. Hours

- The display will flash the current hour.
- Press button A to change the hour
- Press button B to accept.

Hour: 11 AM

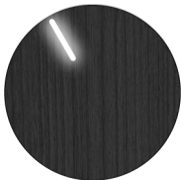


Hour: 7 PM

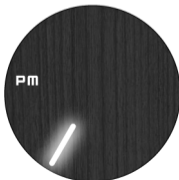

II. Minutes (group of 10)

In the 12-5-9 time telling method, the "group of 10 mins" are [00, 10, 20, 30, 40, 50]. So in this stage, if the exact minute is 34, you would set 30.


- The display will flash the current group of 10 minutes.
- Press button A to change the minutes
- Press button B to accept.

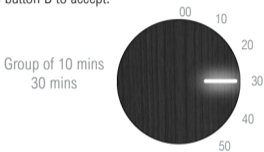

III. Minutes (single)

In the 12-5-9 time telling method, the "single mins" are [0-9]. So in this stage, if the exact minute is 34, you would set 4.

- The display will flash the current single minutes.
- Press button A to change the minutes
- Press button B to accept.

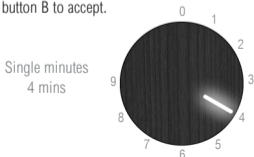


IV. Display Mode

Blade has 2 display modes [TURNING] & [FLASHING]
See section 1 "How to read the time" for an explanation of each mode.

- The display will flash the current display mode.
- Press button A to change the mode
- Press button B to accept.

Turning Mode

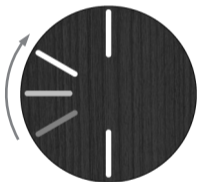

Two vertical blades are lit,
a blade rotates.

Flashing Mode



Two vertical blades are lit,
The top blade flashes.




Change the way you think about time

V. Animation

Blade has an animation mode which causes the watch to animate the display every 15 mins between 6pm & midnight. You may set the animation mode ON or OFF.


- The display will flash the current animation setting.
- Press button A to change the setting
- Press button B to accept & finish.

Animation ON

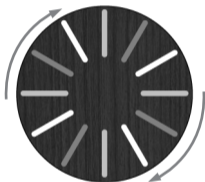


Display spinning

Animation OFF

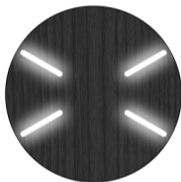

A flashing "X"

5. How to set the date

- Press button A twice to show the date.
- Press & HOLD button B to begin setting the date.
- The  icon will be lit. (date)

*Setting mode will exit after 7 seconds of inactivity


I. Month

- The display will flash the current month (1-12).
- Press button A to change the month
- Press button B to accept.

II. Day (groups of 10)

In the 12-5-9 date telling method, the "group of 10 days" are [00, 10, 20, 30]. So in this stage, if the exact day is 24, you would set 20.

- The display will flash the current "group of 10" days (0-30).
- Press button A to change the "group of 10" days
- Press button B to accept.

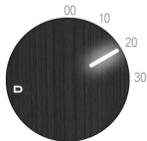


Group of 10 days
20 days

III. Day (single days)

In the 12-5-9 date telling method, the single days are [0-9].
So in this stage, if the exact day is 24, you would set 4.

- The display will flash the current single days (0-9).
- Press button A to change the “group of 10” days
- Press button B to accept.

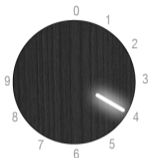


Single days
4 days


IV. Date format

You may set the date to display [Month > Day] or [Day > Month]

- The display will flash the current date format setting.
- Press button A to change the setting
- Press button B to accept & finish.

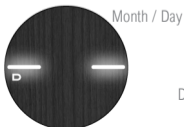




6. How to set the alarm

- Press button A three times to show the alarm.
- Press & HOLD button B to begin setting the alarm.
- The  icon will be lit. (alarm)

*Setting mode will exit after 7 seconds of inactivity

I. Alarm buzzer

- The  icon will be flashing.
- Press button A to turn the alarm buzzer  ON or OFF
- Press button B to accept.

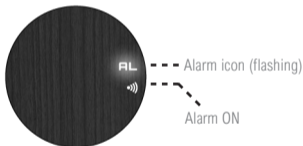


II. Alarm hours

- The display will flash the current alarm hour.
- Press button A to change the alarm hour
- Press button B to accept.

No PM marker = AM


Alarm hour
6AM

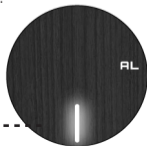

III. Alarm minutes (groups of 10)

In the 12-5-9 time telling method, the "group of 10 mins" are [00, 10, 20, 30, 40, 50]. So in this stage, if the exact minute is 09, you would set 0.


- The display will flash the current group of 10 minutes.
- Press button A to change the minutes.
- Press button B to accept.

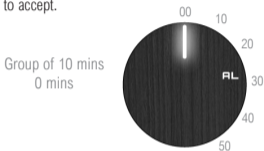

IV. Alarm minutes (single minutes)

In the 12-5-9 time telling method, the "single mins" are [0-9]. So in this stage, if the exact minute is 09, you would set 9.

- The display will flash the current single minutes.
- Press button A to change the minutes
- Press button B to accept & finish.

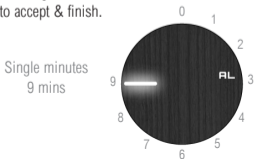

7. Charging the watch


- The watch battery can be recharged by connecting the USB charging cable provided to the watch USB port and the other end to your computer's USB port.
- To open the watch USB port, use the screw driver included.



- When charging, the charging light will animate.
- When the charging light stops animating, the watch is 90% charged.
- It is advised that you continue to charge the watch for the full 3.5 hours to ensure the battery is 100% charged.

Included in the box

- Watch
- USB cable
- Screw driver
- Spare USB cap
- Watch manual
- Link USB Cable

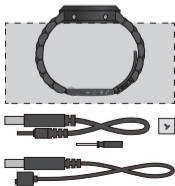

8. User information

I. Battery

- Blade uses a PL301517 rechargeable watch battery.
- The battery should last about 1 month between charges.
- The battery lifetime is expected to be 300 charges.
- Only use the cable provided with the watch for recharging, as it is designed specifically for this watch.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch has limited resistance to water. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Materials	Wood
Strap Materials	Wood
Case Dimensions	45mm x 53mm x 12mm
Finish	Clear Coatng
Maximum Fit Wrist Size	210mm (approx.)
Weight	60g
Display	LED Digital Tube
Battery	PL301517 Rechargable